



Model 12 List of controls that can be used with popular DAWs

Yes	<input type="radio"/>
No	---

	LIVE	Pro Tools	Cubase	Cubasis 3.3 (MCU)	CAKEWALK	Logic Pro	Digital Performer	Studio One	Reaper
F2 SET button (DAW CONTROLLER MARKER screen)	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	---	---	---	---	<input type="radio"/>	<input type="radio"/>
F3 << button (DAW CONTROLLER MARKER screen)	<input type="radio"/>	---	<input type="radio"/>	---	<input type="radio"/>	---	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
F4 >> button (DAW CONTROLLER MARKER screen)	<input type="radio"/>	---	<input type="radio"/>	---	<input type="radio"/>	---	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
F2 CYCL button (DAW CONTROLLER TRACK screen)	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	---	<input type="radio"/>	<input type="radio"/>
F3 <-- button (DAW CONTROLLER TRACK screen)	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
F4 --> button (DAW CONTROLLER TRACK screen)	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
MULTI JOG dial (locate function)	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	---	<input type="radio"/>	<input type="radio"/>
◀◀/▶▶ buttons	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/> *1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
■ button	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
▶/II button	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
● button	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PAN knobs (1-6, 7/8-9/10)	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	---	<input type="radio"/>	---	<input type="radio"/>	<input type="radio"/>
REC buttons (1-6, 7/8-9/10)	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
MUTE switches (1-6, 7/8-9/10)	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
SOLO switches (1-6, 7/8-9/10)	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Channel faders (1-6, 7/8-9/10)	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
FX fader (master fader control)	<input type="radio"/>	---	<input type="radio"/>	<input type="radio"/>	---	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

2024/12/4

*1 : Can only jump to the beginning or end of a song

For more information, please refer to the "DAW Control Manual" for Model 12 on the TASCAM website.