



# Studio Bridge

## List of controls that can be used with popular DAWs

Yes	<input type="radio"/>
No	---

	LIVE	Pro Tools	Cubase	Cubasis 3.3 (MCU)	CAKEWALK	Logic Pro	Digital Performer	Studio One	Reaper
<b>F2</b> <b>SET</b> button (DAW CONTROLLER MARKER screen)	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	---	---	---	---	<input type="radio"/>	<input type="radio"/>
<b>F3</b> <b>&lt;&lt;</b> button (DAW CONTROLLER MARKER screen)	<input type="radio"/>	---	<input type="radio"/>	---	<input type="radio"/>	---	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
<b>F4</b> <b>&gt;&gt;</b> button (DAW CONTROLLER MARKER screen)	<input type="radio"/>	---	<input type="radio"/>	---	<input type="radio"/>	---	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
<b>F2</b> <b>CYCL</b> button (DAW CONTROLLER TRACK screen)	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	---	<input type="radio"/>	<input type="radio"/>
<b>F3</b> <b>&lt;--</b> button (DAW CONTROLLER TRACK screen)	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
<b>F4</b> <b>--&gt;</b> button (DAW CONTROLLER TRACK screen)	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
MULTI JOG dial (locate function)	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	---	<input type="radio"/>	<input type="radio"/>
<b>◀◀/▶▶</b> buttons	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/> *2	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
<b>■</b> button	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
<b>▶/II</b> button	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
<b>●</b> button	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
REC buttons (1-24)	<input type="radio"/> *1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/> *1	<input type="radio"/>

2024/12/4

For more information, please refer to the "DAW Control Manual" for Studio Bridge on the TASCAM website.

\*1 : 1-8

\*2 : Can only jump to the beginning or end of a song